



# Nike SportWatch GPS Front Panel Replacement

This guide will demonstrate how to replace the front panel of the watch.

Written By: Ian Eichorn



## INTRODUCTION

In this guide you will replace the front panel of the watch. It will involve taking it apart the watch to its entirety and using a heating device to easily remove the screen.

---



### TOOLS:

- [iOpener](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Front Panel



- Face the watch upside down so that the back of the watch is exposed. Unscrew the six size #000 5 mm long screws on the back using a size 000 Phillips head screwdriver.


## Step 2



- Carefully separate the watch by pulling the band away from the main board.




## Step 3

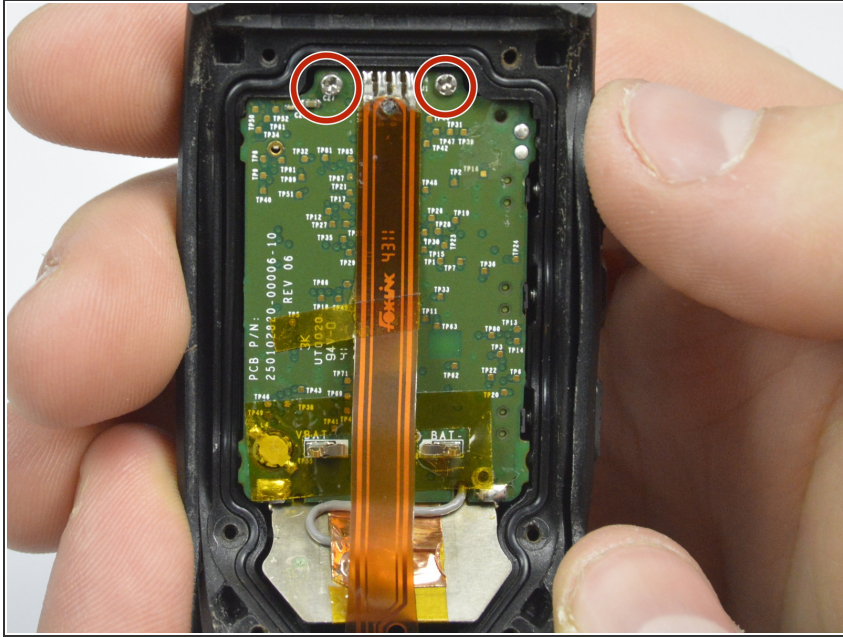

- Two size #000 2.5 mm long screws will appear at the top of the main board. Unscrew them using a size 000 Phillips head screwdriver.

## Step 4

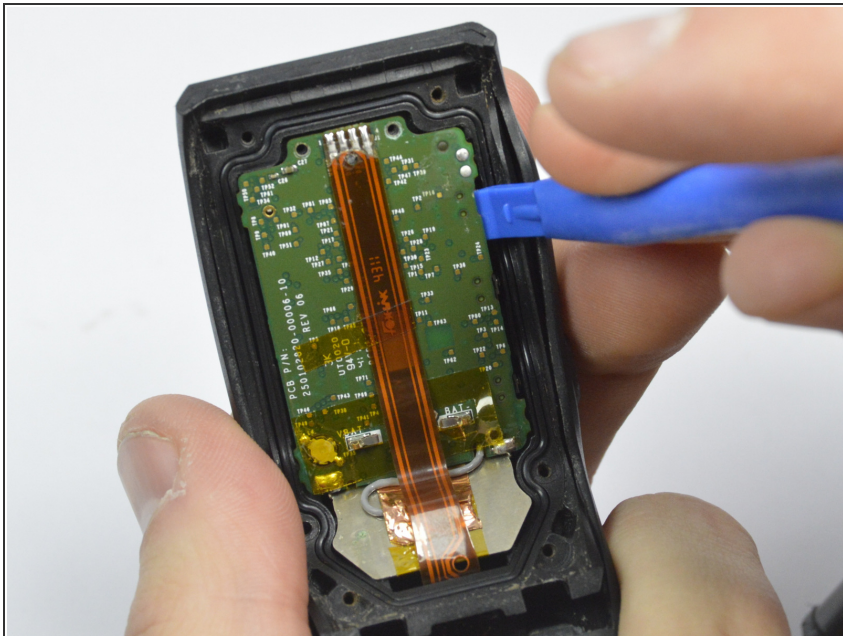


- Carefully use the blue plastic opening tool to pry the main board out of the front panel.
- ⚠ Make sure to be gentle so the ribbon cable that connects to the band does not break, it is fragile and not removable.

## Step 5



- Use an iOpener that has been heated in the microwave for about a minute, or until warm. Place it on the front screen of the watch. Let it rest there for a minute.
- ⓘ If you are unfamiliar with this tool use the iOpener guide [here](#)

## Step 6

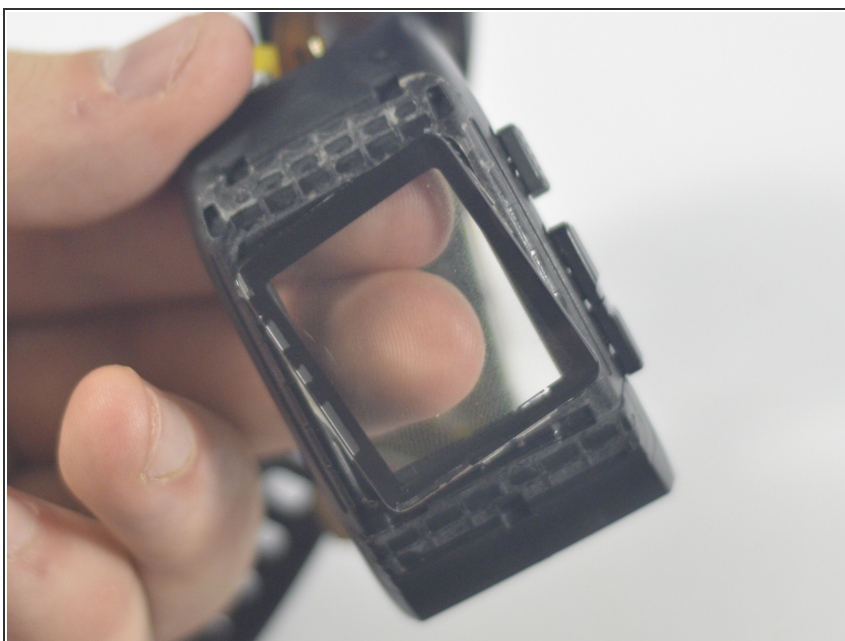

- Push the panel out from the back of the screen, using your fingers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 01:51:54 AM.